



# PRODUCT INFORMATION

## INSTALLATION INSTRUCTIONS FOR TG AIR DRYER

1. Locate the small brass screw on the top of the pump housing. Grasp hold of the nozzle and hold stationary.
2. Remove screw taking special care to ensure that the pump does not spring out.
3. Replace the screw with longer brass screw supplied with the Air Dryer attachment.

NOTE: The screw has a conical point on the end. There is a corresponding indentation on the top of the pump. This must be visible before replacing the screw.



### For TG125 & TG200

4. From the front of the gun, Slip the Air Dryer onto the screw of the gun. Make sure that the small loop of hose goes under the nozzle.



### For TG150 & TG300

4. From the front of the gun, slip both sides of the Air Dryer mounting bracket onto the screw. Make sure that the small loop of hose goes under the nozzle.
5. Screw down the Air Dryer using the supplied chrome thumb nut.
6. Connect the end of the air supply hose to a 1/4" air supply line.



**Important, Do not exceed 80psi air  
pressure**

CUSTOMER LINE: 800/564-1096 • PHONE: 805/965-0704 • FAX: 805/963-7794

SHIPPING  
927 Indio Muerto St.  
Santa Barbara, CA 93103

MAILING  
P.O. Box 4700  
Santa Barbara, CA 93140

ATLANTA SHIPPING  
879 Davis Drive  
Conyers, GA 30207